




LABORATORY SECTOR

COLOR LIGHT BOX



Kalstein®

A different accompaniment, at your service

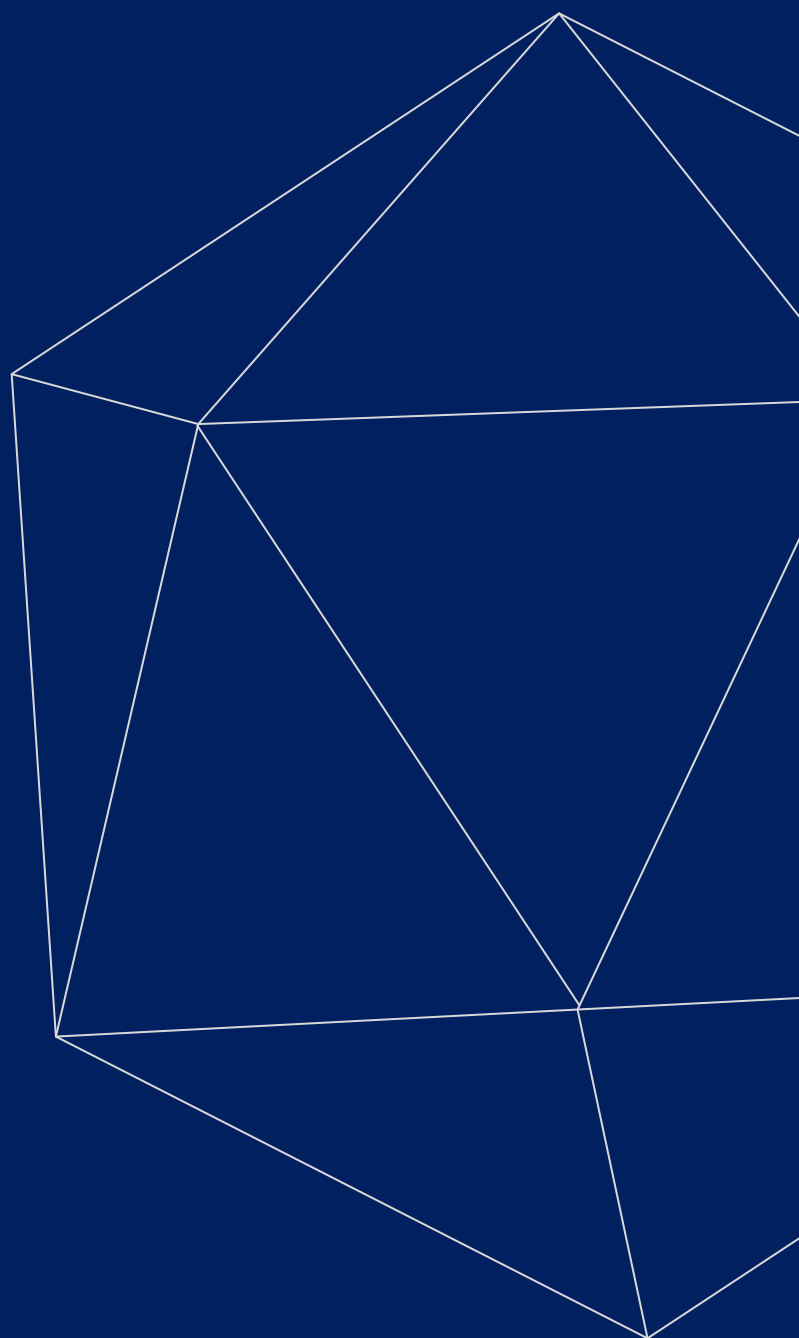



Kalstein®

A different accompaniment, at your service

OUR SERVICES

Benefits and Support

In Kalstein France, we take care of the full satisfaction of our customers, that is why we provide value-added services of the highest level based on our experience.



Online Inductions and Trainings

In any part of the world, receive your induction or training from our specialized team of engineers



Quick Response

Our work team is always available to response all your consults or questions, in order to support you in any situation.



#Letsgivemore

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



Technical Support

Enjoy of personalized advice for the correct preventive and corrective maintenance of your equipment, thanks to Kalstein's manuals and articles, special catalogues and video tutorials.



Delivery Logistics

We take care of all the necessary logistics for the dispatch of your goods, whether is by sea, land or air.



Kalstein Worldwide

With more than 25 years growing with our customers, Kalstein's multiformat and modern content, is now present in more than 10 countries and increasing.



KALSTEIN® Color Light Box
Hanging Color Light Box
Model YR05533 // YR05535



#Letsgivemore ♥

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
2 Rue Jean Lantier • 75001 Paris •
+33 1 78 95 87 89 / +33 6 80 76 07 10 •
<https://kalstein.eu>
KALSTEIN FRANCE, S. A. S



KALSTEIN® Color Light Box Hanging Color Light Box Model YR05533 // YR05535



Product Description:

YR05533 // YR05535 Hanging Color Viewer light box is suitable for all places where color management is required in the printing factory workshop, advertising company, output center, etc. It can be easily installed or hung on the table top and ceiling. YR05533 // YR05535 hanging light box support 3 versions, single light source, double light source, and 3 light sources. Standard light source is D65, D50, U30, and we offer TL84, UV, CWF ,TL83 for optional. This machine was controlled by microcomputer, which allows the rapid conversion between each light source. The Color Viewer also had the function of display the running time of each light source.

Light Source:

In different condition, the object may present different spectrum with same color. Our vision result of the colors will be differently, thereby it will affect us to judge the color accurately by our naked eyes. While according to our customer's demand, the Color Viewer ,which is the international standard, can provide the right light source you need when you check the colors, such as D65,D50,TL84,UV,U30,CWF etc.. The life-span of lamp depends on the accumulated running time and the turn-on times. When the lamp becomes aging, light instability or the two sides turn black, please replace the lamp timely, otherwise, the checking result will be affected.

- ✓ Common Light source: D65,D50,U30
- ✓ Replacement light source: TL84, UV, CWF ,TL83

Lamp Introduction:

Special artificial daylight source for printing

- ✓ D50 standard light source lamp Simulate Daylight Warm daylight
- ✓ High color rendering index CRI≥95 or CRI=98
- ✓ According to ISO 3664:2009 printing standard observation conditions
- ✓ Graphical Pro, COLOR proof series for the exclusive use of imported printing machine
- ✓ 60cm 18W/950 T8 Graphical Pro imported from Europe
- ✓ 120cm 36W/950 T8 Graphical Pro imported from Europe
- ✓ D65 standard light source lamp Simulate Daylight Cold daylight
- ✓ High color rendering index CRI≥95 or CRI=98
- ✓ According to ISO 3664:2009 printing standard observation conditions
- ✓ Special light source for color viewer and color light box,T60+ P60+ CC120 series
- ✓ 60cm 18W/965 T8 Graphical Pro imported from Europe
- ✓ 120cm 36W/965 T8 Graphical Pro imported from Europe



#Letsgivemore

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
2 Rue Jean Lantier • 75001 Paris •
+33 1 78 95 87 89 / +33 6 80 76 07 10 •
<https://kalstein.eu>
KALSTEIN FRANCE, S. A. S



KALSTEIN® Color Light Box

Hanging Color Light Box

Model YR05533 // YR05535



Other Common Light Sources:

- ✓ CWF light source lamp (4150K, cool white fluorescent, US store light source)
- ✓ TL84 light source lamp (4000K, European and Japanese store lighting source)
- ✓ U30 light source lamp (3000K, American store lighting source)
- ✓ U35 light source lamp (3500K, designated light source of United States Target Department)
- ✓ Light source tube (UV source for the detection of products using fluorescent and whitening dyes)
- ✓ A light source bulb (2856K, American shop window spotlight/home incandescent light, color reference light source)

Technical Specifications:

Model	YR05533	YR05534	YR05535
Boundary dimension	130 cm x 76 cm x 10 cm (length) x (width) x (height)		
Material	Real aluminium alloy material		
frame materials	Aluminum alloy profile streamlined design beautiful and elegant imported reflector Uniform light coverplate and illumination		
Uniform light coverplate	Openable uniform light coverplate for easy lamp replacement		
Hanging material	Hooks at the back and a load-bearing steel chain that can be hung directly to the ceiling or fixed to the rack		
Light Source	D65	D65 & TL84	D65 & TL84 & D50
Color temperature	D50 (5000K) or D65 (6500K)		
Lamp series	Graphica for the exclusive use of imported printing machine		
Color rendering index	D50: CRI ≥ 95 or CRI = 98 D65: CRI ≥ 90 or CRI = 95		
Number of lamps	36Wx4 (pcs) – with light source timer		
Light Source Specifications			
Type	D65	D50	U30
Tubes	6500K 36W	5000K 36W	3000K 36W
Power	AC220V 50HZ	AC220V 50HZ	AC220V 50HZ
Wortable Size (cm)	133*97	133*97	133*97
Size (cm)	133* 102*216	133* 102*216	133*102*216



#Letsgivemore

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
 2 Rue Jean Lantier • 75001 Paris •
 +33 1 78 95 87 89 / +33 6 80 76 07 10 •
<https://kalstein.eu>
KALSTEIN FRANCE, S. A. S





 **Kalstein**[®]
A different accompaniment, at your service

#LETSGIVEMORE 

**WITH THE
ACQUISITION
OF A KALSTEIN
EQUIPMENT**

YOU MAKE A CONTRIBUTION TO:



Fundación
Jacinto Convit

<https://www.jacintoconvit.org/>



<https://onetreepanted.org>



Humatem

Solidarité et coopération
biomédicale

<https://www.humatem.org/>



**MANIAPURE
FOUNDATION USA**

<https://www.maniapurefoundation.org/>

Articles Kalstein
(Social Networks and Official Websites)



Kalstein Blog
Not just be informed, be fully informed

The 3 articles of the week!

Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>

1
Read this ARTICLE NOW



How does the climate affect your microscope?

Kalstein Blog

Article of the week:
How does the climate affect your microscope?

Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>

2
Read this ARTICLE NOW



What is the importance of the laboratory refrigerator?

Kalstein Blog

Article of the week:
What is the importance of the laboratory refrigerator?

Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>

Kalstein Training Videos
(Youtube Channel and Official Websites)



Kalstein France - Jacinto Convit Foundation / Allianc...
23 views • 3 years ago



Kalstein's Microscopes
445 views • 1 week ago



PARIS - FRANCE
HEADQUARTER
2 Rue Jean Lantier
75001 Paris - France

Tlf: +33 (0) 01 78 95 87 89
Cel: +33 (0) 6 80 76 07 10
sales@kalstein.eu

<https://kalstein.eu/>
<https://www.kalstein.fr/>

