




LABORATORY SECTOR

COLOR LIGHT BOX



Kalstein®

A different accompaniment, at your service

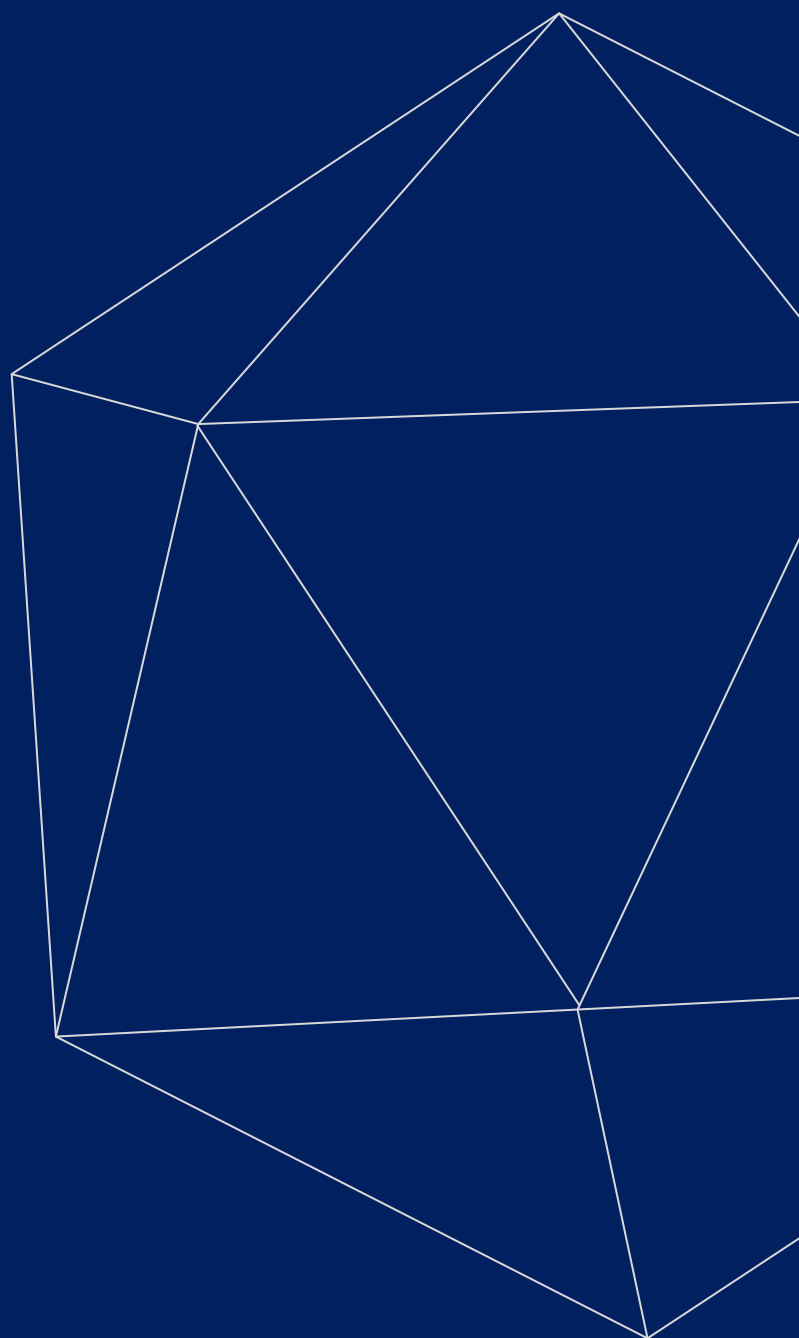



Kalstein®

A different accompaniment, at your service

OUR SERVICES

Benefits and Support

In Kalstein France, we take care of the full satisfaction of our customers, that is why we provide value-added services of the highest level based on our experience.



Online Inductions and Trainings

In any part of the world, receive your induction or training from our specialized team of engineers



Quick Response

Our work team is always available to response all your consults or questions, in order to support you in any situation.



#Letsgivemore ♥

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



Technical Support

Enjoy of personalized advice for the correct preventive and corrective maintenance of your equipment, thanks to Kalstein's manuals and articles, special catalogues and video tutorials.



Delivery Logistics

We take care of all the necessary logistics for the dispatch of your goods, whether is by sea, land or air.



Kalstein Worldwide

With more than 25 years growing with our customers, Kalstein's multiformat and modern content, is now present in more than 10 countries and increasing.



KALSTEIN® Color Light Box
Standard Color Light Box
Model YR05532



#Letsgivemore ♥

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
2 Rue Jean Lantier • 75001 Paris •
+33 1 78 95 87 89 / +33 6 80 76 07 10 •
<https://kalstein.eu>
KALSTEIN FRANCE, S. A. S



KALSTEIN® Color Light Box Standard Color Light Box Model YR05532



Product Description:

YR05532 color light box is 2016 new product, and it adopts 7 light source with 4 sets of LED light (Life up to 25000 times) and 3 sets of fluorescent light source. The unique design combination of the characteristics of Verified and X-rite light box. The multi light source turn-on makes easy to check the metamerism of samples. The sample is one color under this light, but it will display another color when you switch another light source. With UV light, close to natural daylight, it can be used independently or together with other light sources, more effective to check the dye sample if they have fluorescent whitening agent. The adjustable illumination offers different light environment for samples, easier to check color difference.

Product Features:

- ✓ Unique International Design Appearance, combination of the characteristics of Verified and X-rite light box.
- ✓ 7 light source, 4 sets of LED light (Life up to 25000 times), 3 sets of fluorescent light source.
- ✓ Display the use time and numbers of every light source.
- ✓ Adjustable illumination light.
- ✓ Automatic switch among light sources, with metamerism function.
- ✓ No warm-up time or flickering which insures quick and reliable color judgment.
- ✓ Economic power consumption and low heat generation for high light efficiency.
- ✓ Name of light source can be changed, easy to add light.
- ✓ Metal box, durable in use.

Application:

YR05532 color light box is widely used in textile, toy, dye, plastic, pigment, painting, inking, printing, chemical, ceramic, leather, hardware, food etc. industries. It can help check color fastness to visual assessment, color proofing, color difference and fluorescent material etc., and ensure these steps, sample, the production, quality inspection, check and accept to be done in the same standard light source. Accurate check the color difference for better color quality control, to improve product competitive.



#Letsgivemore 

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
2 Rue Jean Lantier • 75001 Paris •
+33 1 78 95 87 89 / +33 6 80 76 07 10 •
<https://kalstein.eu>
KALSTEIN FRANCE, S. A. S



KALSTEIN® Color Light Box
Standard Color Light Box
Model YR05532



Technical Description:

Brand	Kalstein
Model	YR05532
Weight	60kg
Size (S•D•H)	1008×716*898mm
Standard Light source	ASTM/BS/CIE/ISO/DIN/TL84/ANSI
Light source	D65/A/D50/UV/U30/TL84/U35
Power Supply	AC 220V-240V,50/60Hz

The Standard Light Tube Specifications:

Model	Quantity	Specs Parameter	CRI	Lifespan
LED light 1 TruD65	2 pcs	15W,6500±200K	Ra95	20000-50000 hours&25000 on-off time
LED light 2 TruA	2 pcs	15W,2850±200K	Ra96	
LED light 3 TruD50	2 pcs	15W,5000±200k	Ra95	
LED light 4 TruUV	2 pcs	15W,Wavelength 360-390nm	/	
Philips F30T12/30U/RS	2 pcs	30W,4000±200K	Ra80	2000-30000 hours&10000 on-off time
Philips TL-D30S/840	2 pcs	30W,4000±200K	Ra85	
GE F25T8 SPX35 ECO	2 pcs	25W,3500±200K	Ra85	



#Let'sgivemore ♥

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
 2 Rue Jean Lantier • 75001 Paris •
 +33 1 78 95 87 89 / +33 6 80 76 07 10 •
<https://kalstein.eu>
KALSTEIN FRANCE, S. A. S





 **Kalstein**[®]
A different accompaniment, at your service

#LETSGIVEMORE 

**WITH THE
ACQUISITION
OF A KALSTEIN
EQUIPMENT**

YOU MAKE A CONTRIBUTION TO:

 **Fundación
Jacinto Convit**
<https://www.jacintoconvit.org/>


 **ONE
TREE
PLANTED**

<https://onetreepanted.org>

 **Humatem**
Solidarité et coopération
biomédicale
<https://www.humatem.org/>


**MANIAPURE
FOUNDATION USA**
<https://www.maniapurefoundation.org/>

Articles Kalstein
(Social Networks and Official Websites)

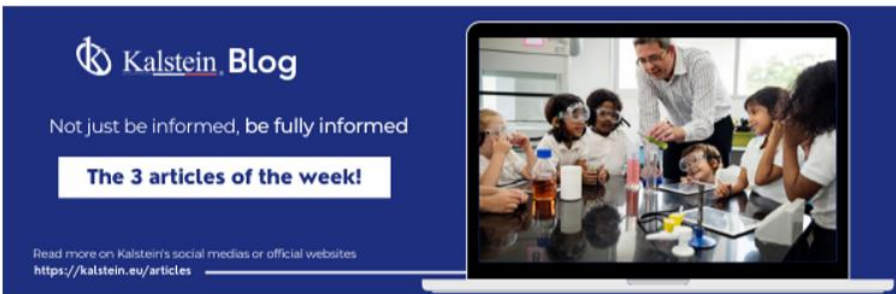

Kalstein Blog
Not just be informed, be fully informed

The 3 articles of the week!

Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>

1
Read this ARTICLE NOW



How does the climate affect your microscope?

Kalstein Blog

Article of the week:
How does the climate affect your microscope?

Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>

2
Read this ARTICLE NOW



What is the importance of the laboratory refrigerator?

Kalstein Blog

Article of the week:
What is the importance of the laboratory refrigerator?

Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>

Kalstein Training Videos
(Youtube Channel and Official Websites)



Kalstein France - Jacinto Convit Foundation / Allianc...

23 views • 3 years ago



Kalstein's Microscopes

445 views • 1 week ago



PARIS - FRANCE
HEADQUARTER

2 Rue Jean Lantier
75001 Paris - France

Tlf: +33 (0) 01 78 95 87 89

Cel: +33 (0) 6 80 76 07 10

sales@kalstein.eu

<https://kalstein.eu/>
<https://www.kalstein.fr/>

